

Programming based on the receiver:

- 1) Open the casing of your receiver. It is located close to your motorization.
- 2) Press simultaneously P1 and P2 buttons on your new remote control (Fig. A). The LED on your new remote control flashes. Release the buttons.
- 3) While the LED on your new remote control is flashing, press the programming button on the receiver board (Fig. B). Keep it pressed. The LED on the receiver flashes.
- 4) While holding the programming button on the receiver, press a button on your new remote control, while the LED on your new remote control is still flashing. Keep it pressed. The LED on the receiver remains steady, then turns off (Fig. C). Release the buttons.
- 5) Wait for 10 seconds; your new remote control is programmed.

